

User Guide



Unit Operation:

This sprayer is equipped with a child safety lock.

- 1) To turn ON press the hold button for 3-4 seconds (this unlocks the child safety lock)
- 2) When the battery lights on the top of the unit are on, the unit can be turned ON and OFF by a single push of the power button.
- 3) When spraying is finished, you can either:
 - a) Leave the unit aside and the child safety lock will activate automatically after 2 minutes; or
 - b) Manually activate the child safety lock by holding the power button for 3-4 seconds. Once the lights are off, the child safety is activated.